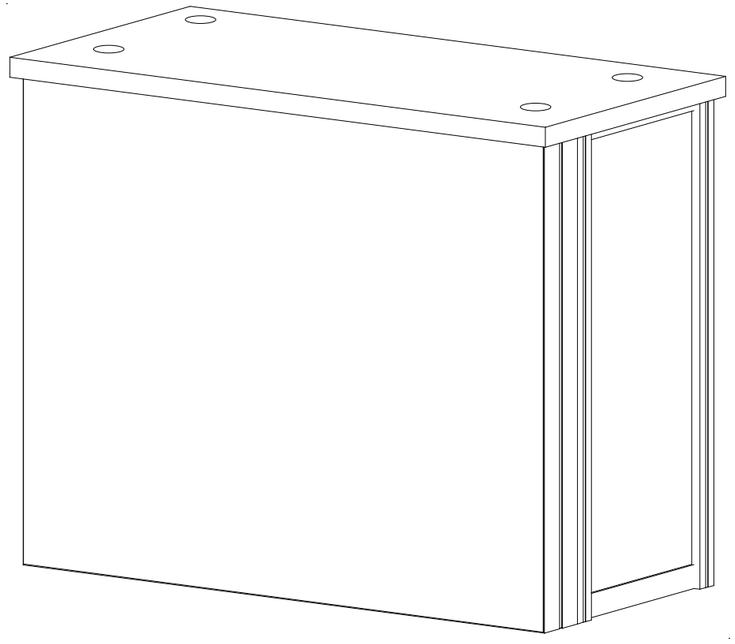

Front View

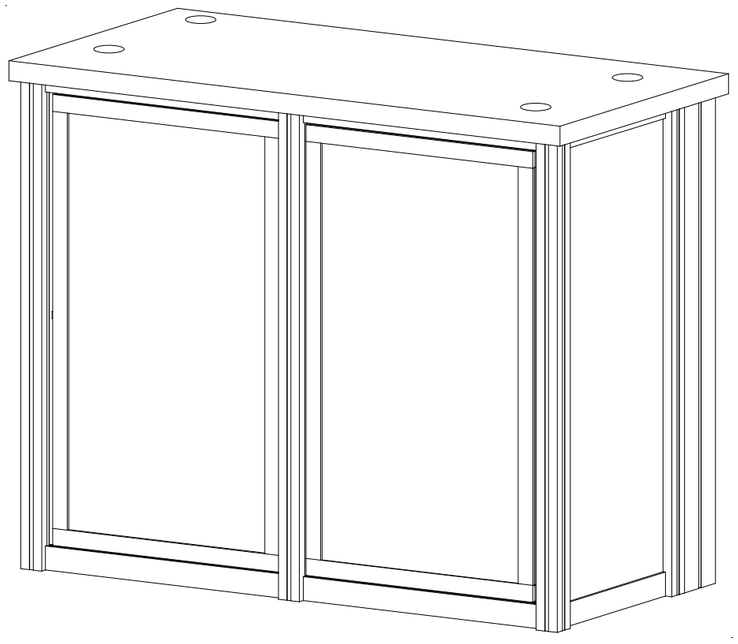

Back View

SETUP INSTRUCTIONS

If you would like to tell us about your experience with your setup instructions please email us at **info@classicexhibits.com**

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.

- The setup instructions are created specifically for this configuration.

- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.

- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**

- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

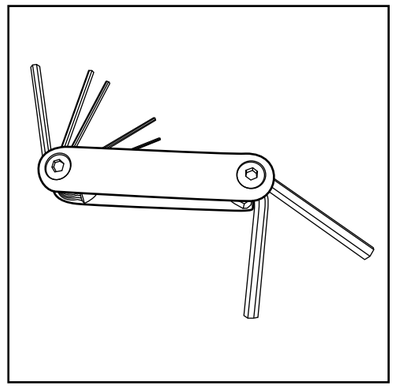

Hex Tool - Essential for Assembly

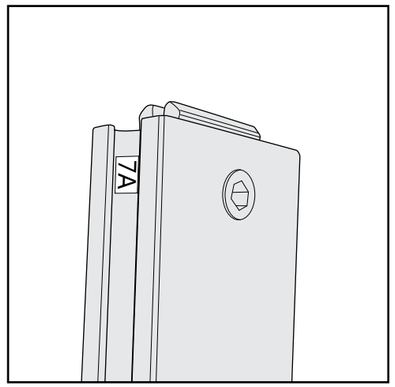

Part Identification - Numbering

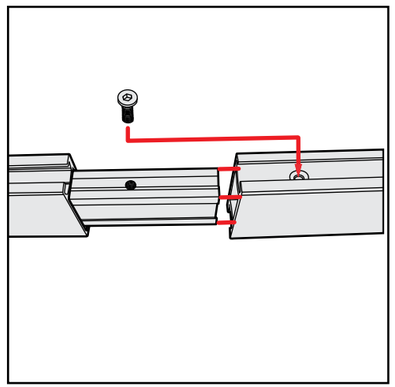

Spline Connection

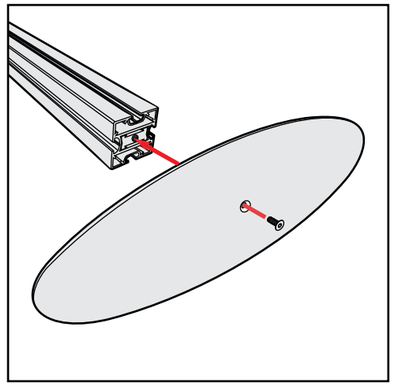

Base Plate & Extrusion Connection

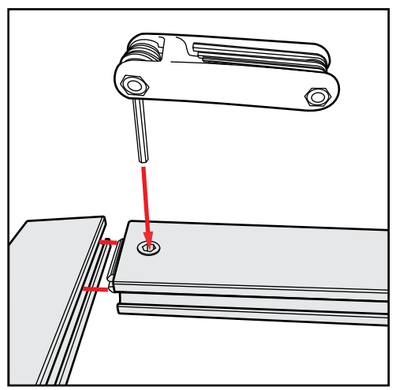

Extrusion & Lock Connection

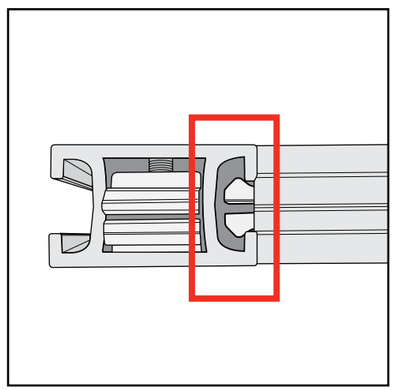

Engaged Lock

WARNING

DO NOT USE POWER TOOLS

LADDERS OR LIFTS MAY BE REQUIRED

ALL CONNECTIONS MUST BE TIGHTLY SECURED

CEI110 Corner Connection:

1) Loosen knobs, then slide vertical extrusions onto corner connectors of **lower** horizontal extrusion.

2) Slide corner connectors of **upper** horizontal extrusion into grooves of vertical extrusions.

3) Tighten all knobs to secure connection.

Disassembly:

1) Loosen knobs on vertical extrusions.

2) Slide the vertical extrusions off of corner connectors on lower and upper horizontal extrusions.

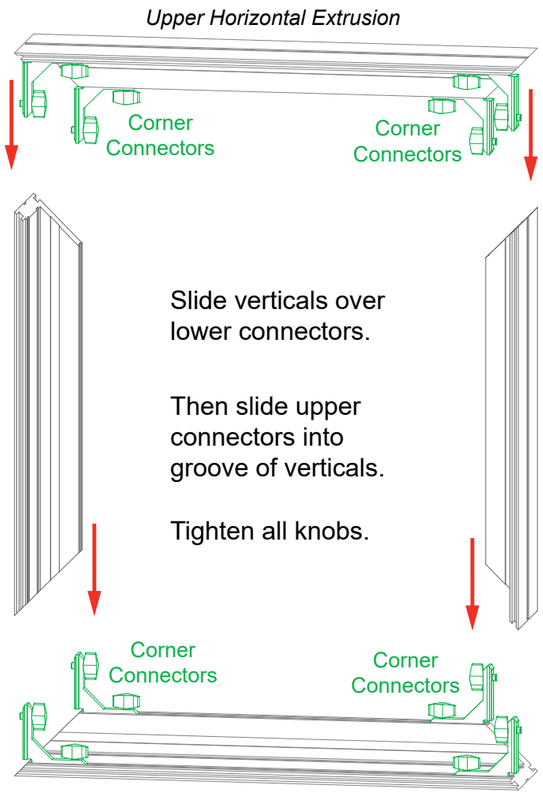

Adjust connectors if necessary to prevent gaps in connection.

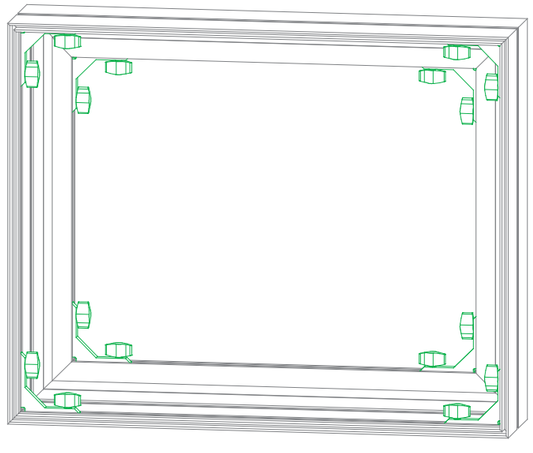

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

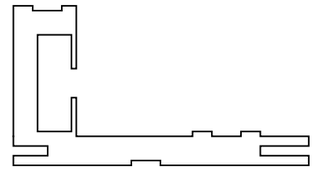

CEI110 Extrusion Profile

SEG Graphic Installation

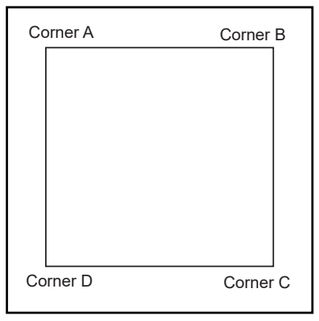

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

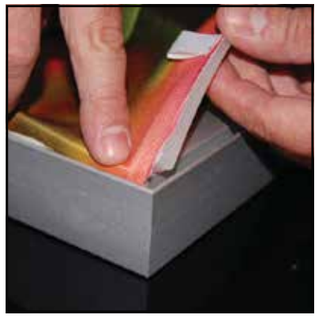

Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.

Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.

Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal

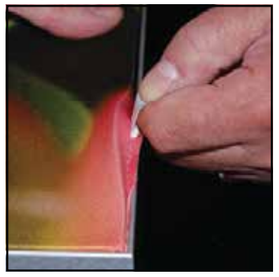

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

Top View of Each Level

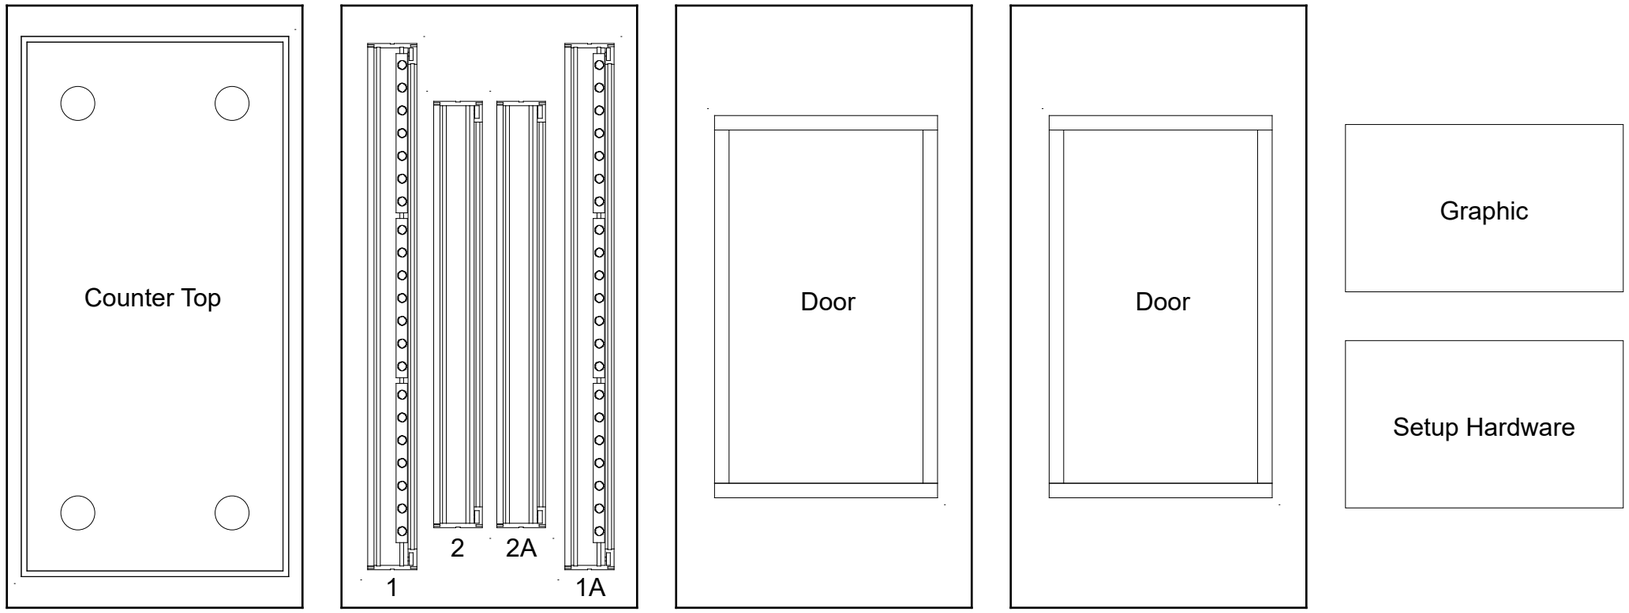

Level 1 (Bottom Level) Level 2 Level 3 Level 4

Top View of Each Level

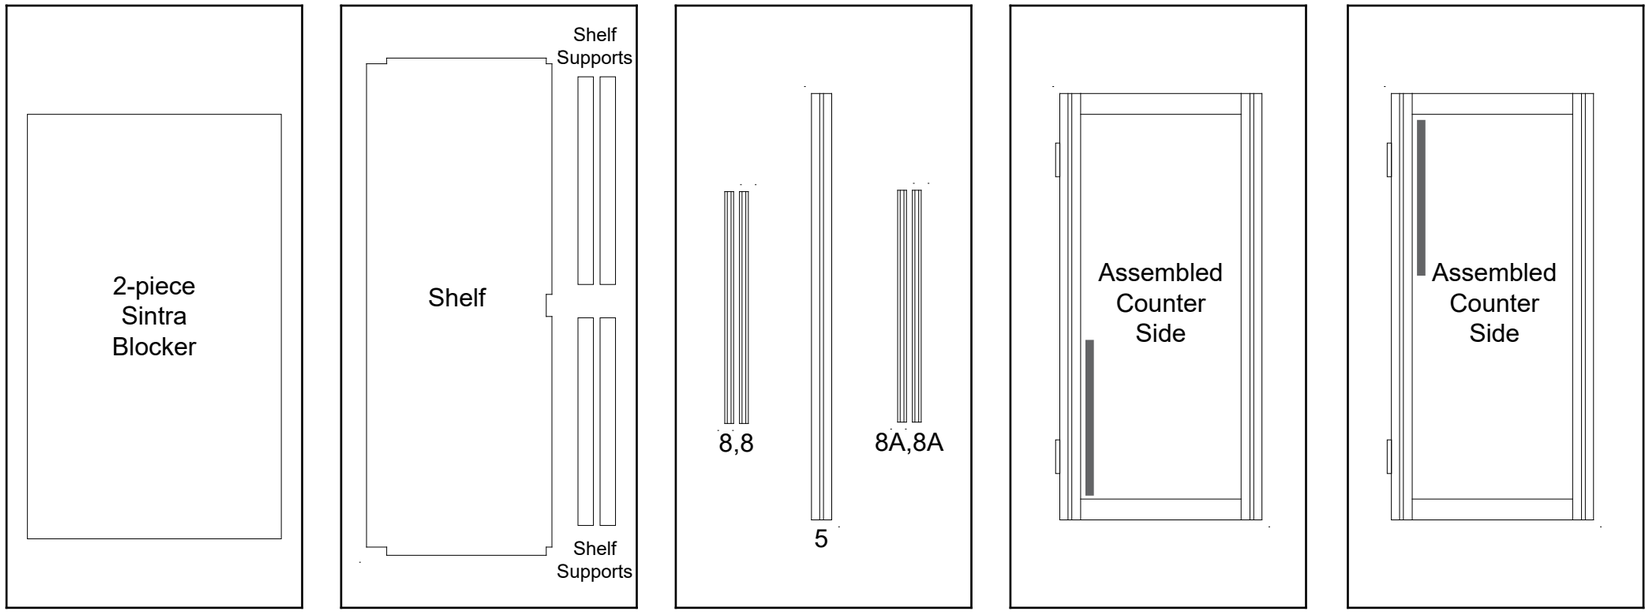

Level 1 (Bottom Level) Level 2 Level 3 Level 4 Level 5

Item	Qty.	Description
1,1A	1,1	46.25” CEI110 Horizontal Extrusion
2,2A	1,1	37.5” CEI110 Vertical Extrusion
3,3A	1,1	37.5” S44 Vertical Extrusion
4	1	37.5” S44 Vertical Extrusion w/ Door Hinges
5	1	37.5” S44 Vertical Extrusion w/ Door Stops
6	1	37.5” S44 Vertical Extrusion w/ Door Hinges
7,7A	2,2	14.153” Z45 Horizontal Extrusion
8,8A	2,2	20.408” Z45 Horizontal Extrusion

Steps:

1) Assemble CEI110 extrusions [1] [1A] [2] and [2A], inserting 2-piece Sintra light blocker. See CEI110 Frame Assembly sheet for instruction.
2) Connect lights and transformer. See Light Connection details.
3) Attach horizontals [7] and [8] between verticals [3] [4] [5] [6] and [3A].
4) Slide infills between verticals [3] [4] and [3A] [6], making sure Velcro is facing inward.
5) Connect doors to verticals [4] and [6]. See Door Connection detail.
6) Attach horizontals [7A] and [8A] between verticals [3] [4] [5] [6] and [3A].
7) Connect shelf supports to Velcro on infills.

Keep counter sides assembled, when packing.

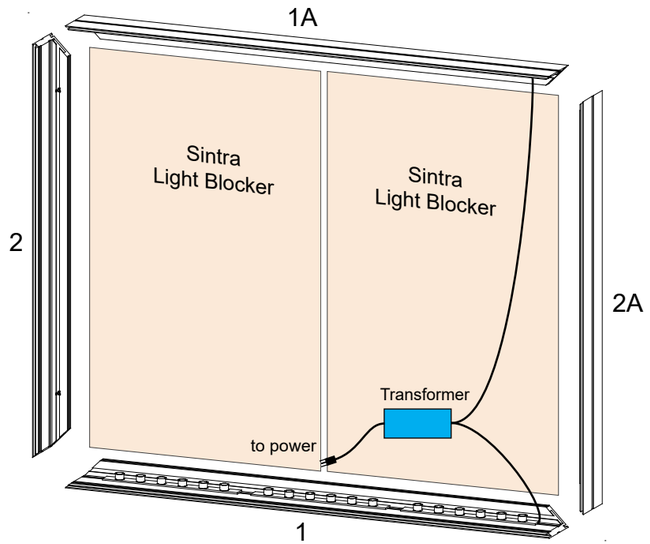

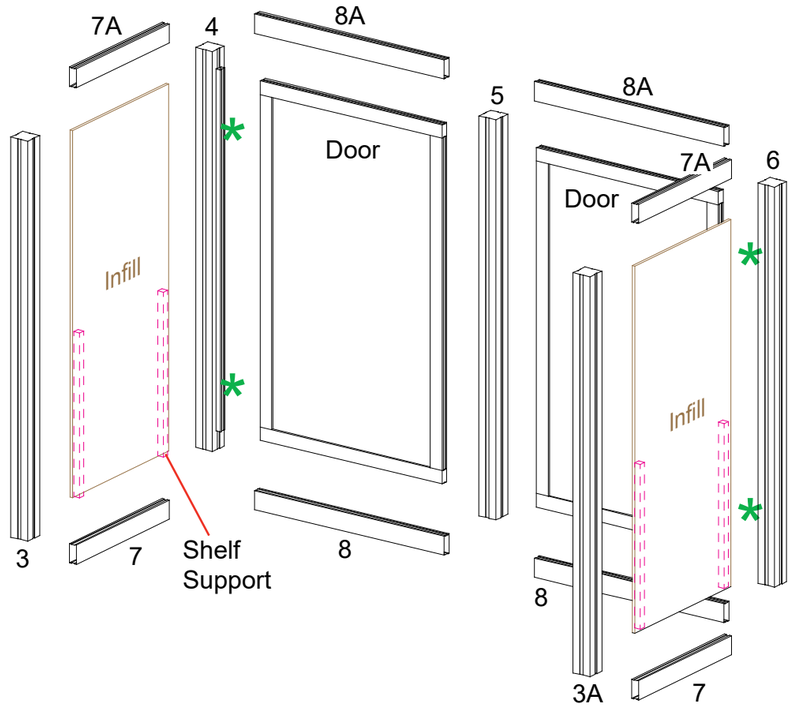

*** Door Connection**

Slide pin into hinge attached to vertical. Slide door hinge over pin.

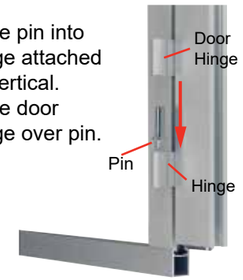

Light to Light Connection



Light to Transformer Connection

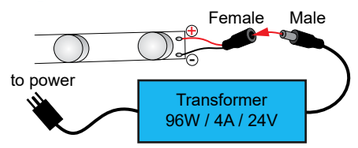

Maximum of 7 light bars per transformer.

Steps:
1) Attach assembled frame to verticals [3] and [3A].
   See Frame Attachment detail.
2) Install SEG graphic to front of assembled frame.
   See SEG Graphic Installation detail.
3) Place shelf inside assembled base on top of pins and supports.
4) Place counter top on assembled base, then secure with pins.
   See Counter Top Attachment detail.
5) Connect power cords to wireless chargers in counter top.

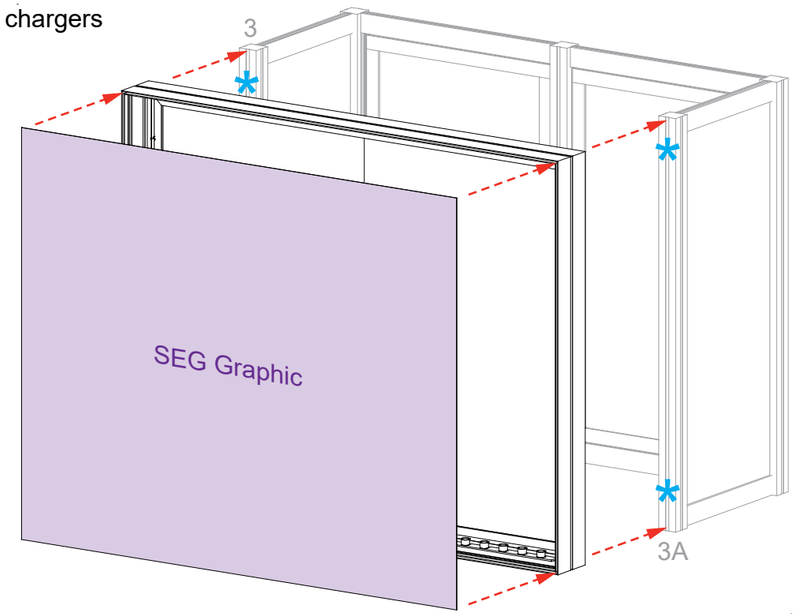

✱ Frame Attachment

Attach frame to connector on vertical extrusion, using bolt.

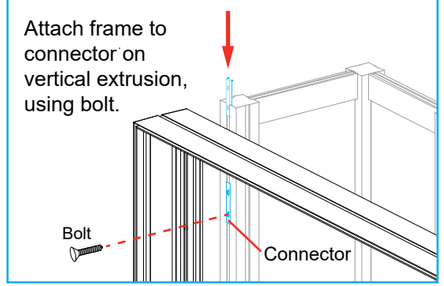

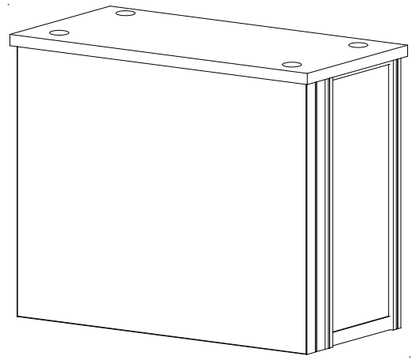

Completed Assembly

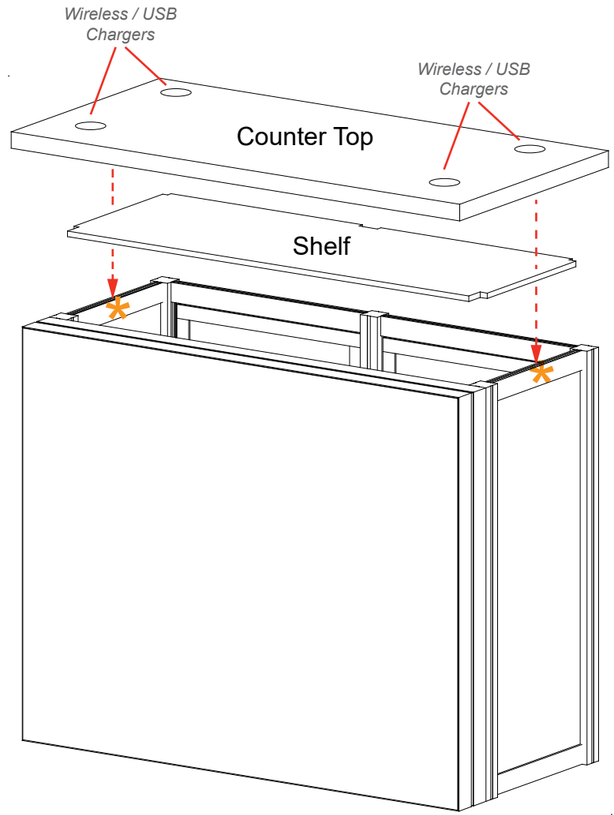

SEG Graphic Installation

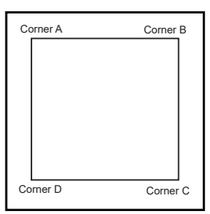

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.

Step 2
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.

Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal

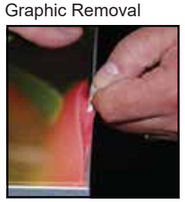

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

✱ Counter Top Attachment

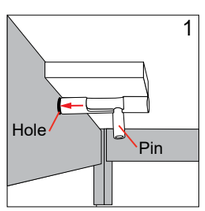

Align hole with pin

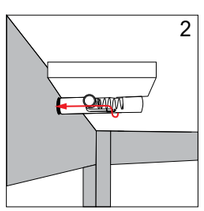

Rotate pin. Spring will push pin into hole.